



Singer Confidence™ 7463






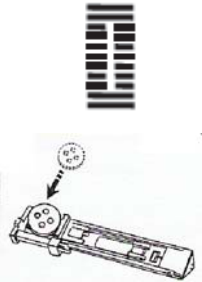
5 Snap-On Presser Feet:
General Purpose, Satin Stitch,
Adjustable Blind Stitch, Zipper,
Buttonhole

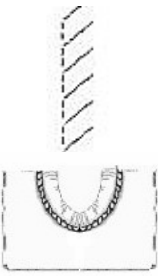

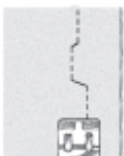
30 Stitches
2 One-Step Buttonholes


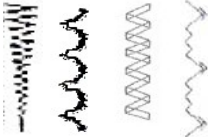
Singer Confidence Family Features:

- PUSH-BUTTON STITCH SELECTION – With a simple push of the button, you select the stitch.
- BUILT-IN STRETCH STITCHES – Specially-designed stitches add strength and flexibility to knitwear seams.
- AUTOMATIC AND ADJUSTABLE STITCH WIDTH AND LENGTH – When a stitch is chosen, the Singer Confidence 7463 automatically sets the best length and width for that stitch. You can also override any stitch length and width to personalize your settings.
- 6-SECOND THREADING SYSTEM – There is no need to get out your manual to thread your Singer Confidence 7463—just follow the arrows.
- AUTOMATIC NEEDLE THREADER – Threading the needle is easy.
- 7 mm STITCH WIDTH – Most stitches can be set for a maximum width of 7 mm to make them more pronounced.
- STITCH LOCKING FUNCTION – Tie-off decorative stitches with just a push of a button.
- ONE-STEP AUTOMATIC PRECISELY BALANCED BUILT-IN BUTTONHOLES – Each side of the buttonhole is sewn in the same direction, creating precisely balanced buttonholes. Choose from two (2) different buttonhole styles on the Singer Confidence 7463.
- MULTIPLE NEEDLE POSITIONS – 13 needle positions allow the sewer greater control when sewing zippers, cording, and topstitching.
- JAM-PROOF BOBBIN SYSTEM – The bobbin case actually floats above the hook, precluding thread jams.
- DROP & SEW™ BOBBIN SYSTEM – Just drop the bobbin into the bobbin case and bobbin thread guide and start sewing. The bobbin thread is brought to the top for you.
- SNAP-ON PRESSER FEET – Change from one foot to another effortlessly with Snap-On feet.
- PORTABLE AND CABINET MOUNTABLE – The built-in carry handle makes it easy to transport. Machine can be mounted into a cabinet with additional hardware.
- HEAVY-DUTY ALUMINUM FRAME – Lightweight and durable.
- 2 StayBright LED LIGHTS™ – These long lasting (100,000 hours) bulbs stays cool, regardless of how long the machine is operated and provides a brighter, more natural light than a standard incandescent bulb.
- ON-BOARD STORAGE – Conveniently store your feet in the built-in accessory tray so they are right where you need them.
- FREE ARM – Remove the accessory tray and easily convert your machine for free arm sewing.
- 25-YEAR LIMITED WARRANTY – Includes 25 years for parts, 5 years for electronics, and 1 year for labor.


| <i>Feature</i> | <i>Technique</i> | <i>Benefit</i> |
|---|---|---|
| <p>SEWS ALL FABRIC TYPES & WEIGHTS</p>  | <p><i>(KITE-TAIL)</i></p> <p>FABRIC: Woven Medium chino, Stretch Light tricot, and Woven Heavy denim</p> <p>SELECT: Center needle straight stitch (Row 1, Stitch 1)</p> <p>USE: General Purpose Presser Foot</p> <p>SEW: Fold all fabrics in half, right sides together. Lining up fold with 5/8" seam guide on stitch plate, sew each fabric, one right after the other.</p> | <ul style="list-style-type: none"> ➤ The Singer Confidence 7463 will sew all different types of fabrics, without having to change the tensions. ➤ The electronic foot control and penetration power of the Singer Confidence 7463 will handle your heavy-duty projects: <ul style="list-style-type: none"> ▪ Home dec ▪ Craft sewing with specialty fabrics ➤ The Automatic Pressure System automatically adjusts for the lightest weight tricot to the heaviest denim, to maximize feed accuracy. |
| <p>EASY THREADING & BOBBIN WINDING</p>  | <p>SHOW:</p> <ul style="list-style-type: none"> ➤ Threading the top thread with the 6-Second Threading System ➤ Automatic needle threader ➤ Additional spool pin for twin needle sewing <p>SHOW:</p> <ul style="list-style-type: none"> ➤ Where the bobbin is wound ➤ Bobbin stop ➤ The arrows on the top cover that show how to wind the bobbin. | <ul style="list-style-type: none"> ➤ The Singer Confidence 7463 has the 6-Second Threading System. Thread the machine in seconds by just following the arrows. ➤ After effortlessly threading the Singer Confidence 7463, use the automatic needle threader for easy needle threading. ➤ Notice the handy thread cutter on the back. ➤ The bobbin winder automatically disengages the needle for bobbin winding, and the automatic bobbin stop prevents over-winding. ➤ The bobbin loads from the top making it is easy to insert the bobbin. The clear cover makes it easy to monitor the bobbin thread supply. |
| <p>WORRY-FREE TENSION</p>  | <p>SHOW: The tension dial.</p> <p>SHOW: The normal range is indicated on the tension dial with the "AUTO" setting.</p> | <ul style="list-style-type: none"> ➤ Tension adjustment is not needed on the Singer Confidence 7463 for many types of fabric. |
| <p>PERFECT REPEATING BUTTONHOLES</p> | <p><i>SHOW: A Buttonhole Sample</i></p> <p>FABRIC: Woven Medium chino and</p> | <ul style="list-style-type: none"> ➤ The buttonhole is repeated easily by using the marked line on the foot as a guide. This is helpful when you |

| <i>Feature</i> | <i>Technique</i> | <i>Benefit</i> |
|---|---|--|
|  | <p>stabilizer</p> <p>SELECT: Buttonhole stitch (Row 5, Stitch 5)</p> <p>USE: Buttonhole foot</p> <p>SEW:</p> <ul style="list-style-type: none"> ➤ Fold fabric in half with a piece of stabilizer between the layers. ➤ Place the button in the adjustable measuring guide on the back of the foot. ➤ Push the button holder back against the button to hold it tight. ➤ Lower the buttonhole lever so that it drops down vertically between the two stoppers. It should not be touching either stopper. ➤ Position the fabric under the presser foot. ➤ Hold the end of the upper thread and start sewing. ➤ The buttonhole will sew in the following order: <ol style="list-style-type: none"> 1. Reverse straight stitch left side of the buttonhole 2. Straight stitch to the front 3. Satin stitch from front to back 4. Straight stitch to the right side 5. Straight stitch to the front on the right side 6. Front bartack 7. Satin stitch on right side 8. The last bartack | <p>are sewing many buttonholes of the same length.</p> <ul style="list-style-type: none"> ➤ The Singer Confidence 7463 sews a one-step automatically balanced built-in buttonhole. ➤ Choose from two different one-step buttonholes. ➤ Each side of the buttonhole is sewn in the same direction creating precisely balanced buttonholes. |
| <p>PERFECT FABRIC FEEDING</p> | <p>The special feeding system is shown in the kite-tail demonstration.</p> | <ul style="list-style-type: none"> ➤ The specially designed feed dogs ensure that the fabric is picked up and supported from the front of the presser foot to the rear. This makes for much more accurate feeding. |
| <p>SERGING/OVERCAST STITCHES</p> | <p>FABRIC: Stretch Medium sweatshirt fleece and ribbing</p> <p>SELECT: Slant Overedge stitch (Row 4, Stitch 3)</p> <p>USE: General Purpose Presser Foot</p> <p>SEW:</p> | <ul style="list-style-type: none"> ➤ Sew the seam and overcast the edges at the same time. ➤ The Slant Overedge stitch prevents raveling of the seam on a woven fabric and creates a seam that will stretch on knit fabrics. |

| <i>Feature</i> | <i>Technique</i> | <i>Benefit</i> |
|---|---|--|
|  | <ul style="list-style-type: none"> ➤ Cut a small neckline in fabric (fold in half and cut a small curve). ➤ Fold ribbing in half lengthwise, and stretch to fit curve of fabric. ➤ Sew near fabric edge creating a neckline. <p>SHOW: The Singer Confidence 7463 offers many stretch stitches.</p> | |
| <p>EASY BLIND HEM</p>  | <p>FABRIC: Woven Medium wool</p> <p>SELECT: Blind Hem stitch (Row 1, Stitch 4)</p> <p>USE: Blind Hem foot</p> <p>SEW:</p> <ul style="list-style-type: none"> ➤ Fold fabric up for a hem. ➤ Sew the hem with the fold riding along the guide of the foot, just catching the fold with the left swing of the needle as you stitch. ➤ Adjust the guide on the foot with the dial as needed to catch just a thread from the fold. | <ul style="list-style-type: none"> ➤ You can "fine tune" the blind hem by adjusting the dial on the blind hem foot to move the hem closer or further away from the needle for different types of fabric. |
| <p>MULTIPLE NEEDLE POSITIONS</p>  | <p>FABRIC: Woven Medium chino</p> <p>SELECT: Center needle straight stitch (Row 1, Stitch 1)</p> <p>USE: General Purpose Presser Foot</p> <p>SEW:</p> <ul style="list-style-type: none"> ➤ Fold fabric in half ➤ Keeping fold along the outside right edge of the presser foot, sew a seam. <p>SELECT: Stitch Width: 7 (right needle position)</p> <p>SEW: Continue sewing along the fold with the new needle position.</p> <p>SELECT: Stitch Width: 1 (left needle position).</p> <p>SEW: Continue sewing along the fold with the new needle position.</p> | <ul style="list-style-type: none"> ➤ Inserting cording, piping, or zippers is easy with 13 needle positions. ➤ The needle position can be changed for individual projects, such as topstitching. |

| <i>Feature</i> | <i>Technique</i> | <i>Benefit</i> |
|---|---|---|
| <p>JAM-PROOF BOBBIN</p> | <p>FABRIC: Woven Medium calico</p> <p>SELECT: Center needle straight stitch (Row 1, Stitch 1)</p> <p>USE: General Purpose Presser Foot</p> <p>SEW: Piece quilt strips together with one continuous seam, stitching “on air” between the fabric strips.</p> | <ul style="list-style-type: none"> ➤ With the jam-proof bobbin system, you can even sew off the fabric. ➤ The Singer Confidence 7463 allows easy strip piecing because of this feature. ➤ A wonderful feature for the quilter, home dec sewer, garment sewer – everyone! |
| <p>EASY-TOUCH STITCH SELECTION</p>  | <p>SHOW: Select various stitches by pushing the buttons along each row to show how easy it is to select or change a stitch.</p> | <ul style="list-style-type: none"> ➤ Just push the button next to the row where your stitch is located. The LED light above that stitch lights up when it is ready to sew. |
| <p>BUILT-IN DECORATIVE STITCHES</p>  | <p><i>SHOW: Decorative Stitch Sample</i></p> <p>FABRIC: Woven Medium chino and stabilizer (under the fabric).</p> <p>SELECT: The Crescent stitch (Row1, Stitch 5)</p> <p>USE: Satin Stitch Foot</p> <p>SEW:</p> <ul style="list-style-type: none"> ➤ Sew a row of this decorative stitch. ➤ Vary the stitch by adjusting the stitch width and length as you are sewing. <p>SHOW: The Singer 7466 offers more decorative stitches.</p> | <ul style="list-style-type: none"> ➤ Decorative stitches are a great way to add interest to a project or even embellish a ready-to-wear garment. |
| <p>ALPHABETS/ MONOGRAMS</p> | <p><i>SHOW: Lettering Sample</i></p> <p>SHOW: Singer Confidence 7470 and Singer Curvy 8770 both have this feature.</p> | |
| <p>MACHINE SETTING ADVICE</p> | <p>SHOW: The stitch length and width are automatically set for any stitch chosen.</p> | <ul style="list-style-type: none"> ➤ With just a simple push of a button you have selected the stitch and the optimum settings for stitch length, stitch width, balance, presser foot pressure, and tension. |



| <i>Feature</i> | <i>Technique</i> | <i>Benefit</i> |
|--|---|--|
| <p data-bbox="235 325 370 388">QUILTING FEATURES</p>  | <p data-bbox="446 325 738 357"><i>SHOW: Quilting Sample</i></p> <p data-bbox="446 388 901 472">FABRIC: Quilt sandwich with Medium woven cotton on top and bottom, and batting in the middle.</p> <p data-bbox="446 514 933 546">SELECT: Feather Stitch (Row 3, Stitch 1)</p> <p data-bbox="446 577 933 609">USE: Satin Stitch and Quilt Walking Foot</p> <p data-bbox="446 640 885 672">SEW: A row of this decorative stitch.</p> | <ul style="list-style-type: none"> <li data-bbox="974 325 1388 388">➤ Quilting is easy with the Singer Confidence 7463. <li data-bbox="974 420 1445 598">➤ Besides the Feather Stitch, the Singer Confidence 7463 offers a Mock Hand-look Quilting Stitch and several continuous pattern stitches that can be used for borders and sashing strips. <li data-bbox="974 640 1437 819">➤ Optional Quilting feet include the Walking Foot and the Quilt Foot. The Walking Foot helps quilt layers feed evenly when quilting, and the Quilt Foot sews a perfect quarter inch seam. |