



Singer Confidence™ 7469




5 Snap-On Presser Feet:
General Purpose, Satin Stitch,
Adjustable Blind Stitch, Zipper,
Buttonhole




98 Stitches
7 One-Step Buttonholes

The Singer Confidence 7469 has all the features of the Singer Confidence 7467 plus the following

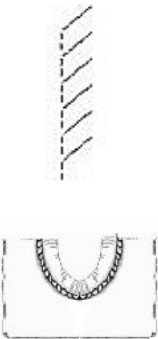

Sell-Up Features from the Singer Confidence 7467:



- 6 ADDITIONAL DIRECT-STITCH BUTTON SELECTIONS – Quickly select the most popular stitches with just one touch.
- AUTOMATIC BACK-TACK FUNCTION – Tie off straight stitching with just a push of a button.
- MORE DECORATIVE STITCHES AND BUTTONHOLES – There are 24 more stitches and 4 more buttonholes on the Singer Confidence 7469.
- PROGRAMMABLE NEEDLE UP AND DOWN – Select whether the needle is up or down when the machine stops.
- 7 ONE-STEP BUTTONHOLES – Choose from three (3) different buttonhole styles. Each side of the buttonhole is sewn in the same direction, creating beautifully balanced buttonholes.

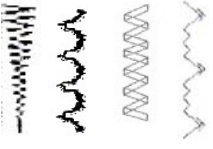

<i>Feature</i>	<i>Technique</i>	<i>Benefit</i>
<p>SEWS ALL FABRIC TYPES & WEIGHTS</p> 	<p><i>(KITE-TAIL)</i></p> <p>FABRIC: Woven Medium chino, Stretch Light tricot, and Woven Heavy denim</p> <p>SELECT: Center needle straight stitch, (Stitch 00)</p> <p>USE: General Purpose Presser Foot</p> <p>SEW: Fold all fabrics in half, right sides together. Lining up fold with 5/8" seam guide on stitch plate, sew each fabric, one right after the other.</p>	<ul style="list-style-type: none"> ➤ The Singer Confidence 7469 will sew all different types of fabrics without having to change the tensions. ➤ The electronic foot control and penetration power of the Singer Confidence 7469 will handle any of your heavy-duty projects: <ul style="list-style-type: none"> ▪ Home dec ▪ Craft sewing with specialty fabrics ➤ The Automatic Pressure System automatically adjusts for the lightest weight tricot to the heaviest denim to maximize feed accuracy.
EASY THREADING & BOBBIN WINDING	<p>SHOW:</p> <ul style="list-style-type: none"> ➤ Threading the top thread with the 6-Second Threading System ➤ Automatic needle threader ➤ Additional spool pin for twin needle sewing 	<ul style="list-style-type: none"> ➤ The Singer Confidence 7469 has the 6-Second Threading System. Thread the machine in seconds by just following the arrows. ➤ After effortlessly threading the Singer

<i>Feature</i>	<i>Technique</i>	<i>Benefit</i>
	<p>SHOW:</p> <ul style="list-style-type: none"> ➤ Where the bobbin is wound ➤ Bobbin stop ➤ The arrows on the top cover that show winding the bobbin. 	<p>Confidence 7469, the eye of the needle automatically threads.</p> <ul style="list-style-type: none"> ➤ Notice the handy thread cutter on the back. ➤ The bobbin winder automatically disengages the needle for bobbin winding, and the automatic bobbin stop prevents over-winding. ➤ The bobbin loads from the top so it is easy to insert the bobbin. The clear cover makes it easy to monitor the bobbin thread supply.
<p>WORRY-FREE TENSION</p> 	<p>SHOW: The tension dial.</p> <p>SHOW: The normal range is indicated on the tension dial with the “AUTO” setting.</p>	<ul style="list-style-type: none"> ➤ Tension adjustment is not needed on the Singer Confidence 7469 for many types of fabric.
<p>PERFECT REPEATING BUTTONHOLES</p> 	<p><i>SHOW: A Buttonhole Sample</i></p> <p>FABRIC: Woven Medium chino and stabilizer</p> <p>SELECT: Buttonhole stitch (Stitch 94)</p> <p>USE: Buttonhole Foot</p> <p>SEW:</p> <ul style="list-style-type: none"> ➤ Fold fabric in half with a piece of stabilizer between the layers. ➤ Place button in adjustable measuring guide on back of foot. ➤ Push button holder back against button to hold it tight. ➤ Lower buttonhole lever so that it drops down vertically between the two stoppers. It should not be touching either stopper. ➤ Position fabric under presser foot. ➤ Hold the end of upper thread and start sewing. ➤ The buttonhole will sew in the following order: <ol style="list-style-type: none"> 1. Straight stitch to front. 2. Reverse straight stitch on the left side of the buttonhole. 3. Back bartack. 4. Satin stitch from back to front on 	<ul style="list-style-type: none"> ➤ The buttonhole is repeated easily by using the marked line on the foot as a guide. This is helpful when you are sewing many buttonholes of the same length. ➤ The Singer Confidence 7469 sews a one-step, automatically balanced, built-in buttonhole. ➤ Choose from two different one-step buttonholes. ➤ Each side of the buttonhole is sewn in the same direction creating beautifully balanced buttonholes. ➤ When the buttonhole is completed, the Singer Confidence 7469 takes locking stitches and stops.

Feature *Technique* *Benefit*

	<p>left side.</p> <ol style="list-style-type: none"> 5. Straight stitch to the back on the right side. 6. Satin stitch from back to front on right side 7. Front bartack, then machine takes locking stitches and stops automatically. 	
<p>PERFECT FABRIC FEEDING</p>	<p>The special feeding system is shown in the kite-tail demonstration.</p>	<ul style="list-style-type: none"> ➤ The specially designed feed dogs ensure that the fabric is picked up and supported from the front of the presser foot to the rear. This makes for much more accurate feeding.
<p>SERGING/ OVERCAST STITCHES</p> 	<p>FABRIC: Stretch Medium sweatshirt fleece and ribbing</p> <p>SELECT: Slant Overedge stitch (Stitch 25)</p> <p>SELECT: Needle down</p> <p>USE: General Purpose Presser Foot</p> <p>SEW:</p> <ul style="list-style-type: none"> ➤ Cut a small neckline in fabric (fold in half and cut a small curve). ➤ Fold ribbing in half lengthwise, stretch to fit curve of fabric. ➤ Sew near fabric edge creating a neckline. <p>SHOW: The Singer Confidence 7469 offers a variety of stretch stitches.</p>	<ul style="list-style-type: none"> ➤ Sew the seam and overcast the edges at the same time. ➤ The Slant Overedge stitch prevents raveling of the seam allowance on a woven fabric and creates a seam that will stretch on knit fabrics. ➤ Using the Needle Up/Down setting allows you to stretch the ribbing while keeping the fleece in place under the presser foot.
<p>EASY BLIND HEM</p> 	<p>FABRIC: Woven Medium wool</p> <p>SELECT: Blind Hem stitch (Stitch 06)</p> <p>USE: Blind Hem Foot</p> <p>SEW:</p> <ul style="list-style-type: none"> ➤ Fold fabric up for a hem. ➤ Sew the hem with the fold riding along the guide of the foot, just catching the fold with the left swing of the needle as you stitch. ➤ Adjust the guide on the foot with the dial as needed to catch just a thread from the fold. 	<ul style="list-style-type: none"> ➤ You can "fine tune" the blind hem by adjusting the dial on the Blind Hem Foot to move the hem closer or further away from the needle for different types of fabric.

<i>Feature</i>	<i>Technique</i>	<i>Benefit</i>
<p>MULTIPLE NEEDLE POSITIONS</p> 	<p>FABRIC: Woven Medium chino</p> <p>SELECT: Center straight stitch (Stitch 00)</p> <p>USE: General Purpose Presser Foot</p> <p>SEW:</p> <ul style="list-style-type: none"> ➤ Fold fabric in half. ➤ Keeping fold along the outside right edge of the presser foot, sew a seam. <p>SELECT: Stitch Width: 7 (right needle position).</p> <p>SEW: Continue sewing along the fold with the new needle position.</p> <p>SELECT: Stitch Width: 1 (left needle position).</p> <p>SEW: Continue sewing along the fold with the new needle position.</p>	<ul style="list-style-type: none"> ➤ Inserting cording, piping, or zippers is easy with 13 needle positions. ➤ Needle position can be changed for individual projects such as topstitching.
<p>JAM-PROOF BOBBIN</p>	<p>FABRIC: Woven Medium calico</p> <p>SELECT: Center needle straight stitch (stitch 00)</p> <p>USE: General Purpose Presser Foot</p> <p>SEW: Piece quilt strips together with one continuous seam, stitching “on air” between the fabric strips.</p>	<ul style="list-style-type: none"> ➤ With the jam-proof bobbin system, you can even sew off the fabric. ➤ The Singer Confidence 7469 allows easy strip piecing because of this feature. ➤ A wonderful feature for the quilter, home dec sewer, garment sewer – everyone!
<p>EASY-TOUCH STITCH SELECTION</p> 	<p>SHOW: Quick Selection Buttons and Pattern Reference Guide</p> <p>SELECT: Choose a stitch from the Pattern Reference Guide. Press the arrows to bring that number up on the Number Display window.</p>	<ul style="list-style-type: none"> ➤ Choosing your stitch by touching one of the Quick Selection Buttons is easy. ➤ Pull out the Pattern Reference Guide to find the stitch number to sew. ➤ Just enter the number by touching the arrows on the left and right of the Number Display window. ➤ Changing stitches is that easy.

<i>Feature</i>	<i>Technique</i>	<i>Benefit</i>
<p>BUILT-IN DECORATIVE STITCHES</p> 	<p><i>SHOW: Decorative Stitch Sample</i></p> <p>FABRIC: Woven Medium chino and stabilizer (under the fabric).</p> <p>SELECT: The Crescent stitch (Stitch48)</p> <p>USE: Satin Stitch Foot</p> <p>SEW:</p> <ul style="list-style-type: none"> ➤ Sew a row of this decorative stitch. ➤ Vary the stitch by adjusting the stitch width and length as you sew. 	<ul style="list-style-type: none"> ➤ Decorative stitches are a great way to add interest to a project or even embellish a ready-to-wear garment.
<p>ALPHABETS/ MONOGRAMS</p>	<p><i>SHOW: A Lettering Sample</i></p> <p>SHOW: The Singer Confidence 7470 and Singer Curvy 8770 both have this feature.</p>	
<p>MACHINE SETTING ADVICE</p>	<p>SHOW: The stitch length and width are automatically set when you choose any stitch.</p>	<ul style="list-style-type: none"> ➤ With just a simple push of a button, you have selected the stitch and the optimum settings for stitch length, stitch width, balance, foot pressure, and tension.
<p>QUILTING FEATURES</p> 	<p><i>SHOW: A Quilting Sample</i></p> <p>FABRIC: Quilt sandwich with Medium Woven cotton on top and bottom, and batting in the middle.</p> <p>SELECT: Feather Stitch (Stitch 11)</p> <p>USE: Satin Stitch and Quilt Walking Foot</p> <p>SEW: A row of this decorative stitch.</p>	<ul style="list-style-type: none"> ➤ Quilting is easy with the Singer Confidence 7469. ➤ Besides the Feather Stitch, the Singer Confidence 7469 offers a Mock Handlook Quilting Stitch and several continuous pattern stitches that can be used for borders and sashing strips. ➤ Optional Quilting feet include the Walking Foot and the Quilt Foot. The Walking Foot helps quilt layers feed evenly when quilting, and the Quilt Foot sews a perfect quarter inch seam.