



Singer Inspiration™ 4205








General Purpose, Special Purpose,
 Buttonhole, Zipper, Adjustable Blind Hem Foot
 *Singer Bonus Bag:
 Driver Tool, Free Motion/Darning,
 Gathering Foot

5 Stitches



Inspiration Family Features:

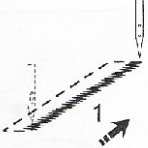

- EXCLUSIVE NoError Threading™ – The Inspiration has a fault-tolerant upper threading system that works even when you forget to raise the presser foot.
- EXCLUSIVE SureFit Bobbin™ – This eliminates any confusion when setting the bobbin in place because it only goes in one way.
- EXCLUSIVE DURATEC™ FRAME – Duratec is a unique space-age material that offers strength, reduced weight, and improved functional performance.
- StayBright LED LIGHT™ – This long lasting, 100,000 hour LED light stays cool, regardless of how long the machine is operated and provides a brighter, more natural light than a standard incandescent bulb.
- ADJUSTABLE STITCH WIDTH AND LENGTH – Up to 6 mm stitch width and variable stitch length allows you to set your stitch for precise sewing on any project.
- MULTIPLE NEEDLE POSITIONS – Needle position can be changed for individual projects such as inserting zippers or cording and topstitching.
- JAM-PROOF BOBBIN SYSTEM – The bobbin case actually floats above the hook, precluding thread jams.
- PORTABLE AND CABINET MOUNTABLE – The built-in carry handle makes it easy to transport. Machine can be mounted into a cabinet with additional hardware.

<i>Feature</i>	<i>Technique</i>	<i>Benefit</i>
SEWS ALL FABRIC TYPES & WEIGHTS ----- ----- -----	<i>(KITE-TAIL)</i> FABRIC: Woven Medium chino, Stretch Light tricot, and Woven Heavy denim SELECT: Center needle straight stitch USE: General Purpose Presser Foot SEW: Fold all fabrics in half, right sides together. Lining up fold with 5/8" seam guide on stitch plate, sew each fabric, one right after the other.	<ul style="list-style-type: none"> ➤ The Singer Inspiration 4205 will sew all different types of fabrics without having to change the tensions. ➤ The electronic foot control and penetration power of the Singer Inspiration 4205 will handle any of your heavy-duty projects: <ul style="list-style-type: none"> ▪ Home dec ▪ Craft sewing with specialty fabrics ➤ The Automatic Pressure System automatically adjusts pressure from the

<i>Feature</i>	<i>Technique</i>	<i>Benefit</i>
		lightest weight tricot to the heaviest denim, to maximize feed accuracy.
<p>EASY THREADING AND BOBBIN WINDING</p> 	<p>SHOW:</p> <ul style="list-style-type: none"> ➤ Threading the top thread with the Exclusive NoError Threading ➤ The additional spool pin for twin needle sewing <p>SHOW:</p> <ul style="list-style-type: none"> ➤ Where the bobbin is wound ➤ The bobbin stop ➤ The Exclusive SureFit Bobbin 	<ul style="list-style-type: none"> ➤ The Singer Inspiration 4205 has Exclusive NoError Threading. This fault-tolerant upper threading system works even if you forget to raise the presser foot. Thread the machine in seconds by just following the arrows. ➤ Notice the handy thread cutter on the back. ➤ The bobbin winder automatically disengages the needle for bobbin winding and the automatic bobbin stop prevents over-winding. ➤ With the Singer Exclusive SureFit Bobbin, it is easy to correctly insert the bobbin because it only goes in one way.
<p>WORRY-FREE TENSION</p> 	<p>SHOW: Tension lever</p> <p>SHOW: The normal range is indicated on the tension dial with the “AUTO” setting.</p>	<ul style="list-style-type: none"> ➤ Tension adjustment is not needed on the Singer Inspiration 4205 for many types of fabric.
<p>PERFECT REPEATING BUTTONHOLES</p>   	<p>SHOW: <i>Buttonhole Sample</i></p> <p>FABRIC: Woven Medium chino and stabilizer</p> <p>SELECT: Buttonhole Step 1, center needle position; and Stitch Width: wide</p> <p>USE: Buttonhole Foot</p> <p>SEW:</p> <ul style="list-style-type: none"> ➤ Fold medium weight woven fabric in half with a piece of stabilizer between the layers. ➤ When lowering the buttonhole foot, position the fabric so that the needle is on the mark that is closest to you. This is the right side of the buttonhole and will sew away from you. ➤ Sew at a moderate speed until you reach the marking on the fabric indicating the bottom of the 	<ul style="list-style-type: none"> ➤ The buttonhole is repeated easily by using the marked lines on the foot as a guide. This is helpful when you are sewing many buttonholes of the same length. ➤ Buttonhole sewing is a simple 4-step process that provides reliable results.

<i>Feature</i>	<i>Technique</i>	<i>Benefit</i>
	<p>buttonhole.</p> <p>SELECT: Buttonhole Step 2 (2 – 4)</p> <p>SEW:</p> <ul style="list-style-type: none"> ➤ As you begin sewing again, the Inspiration 4205 will sew the back bartack. Sew just a few stitches to form the bartack. ➤ Stop with the needle in the left position. <p>SELECT: Buttonhole Step 3</p> <p>SEW:</p> <ul style="list-style-type: none"> ➤ Stitch the left side of the buttonhole. It will sew towards you. ➤ Stop sewing at the mark at the end which is closest to you. <p>SELECT: Buttonhole Step 4 (2 – 4)</p> <p>SEW: Sew a few stitches to form the top bar tack.</p>	
<p>PERFECT FABRIC FEEDING</p>	<p>The special feeding system is shown in the kite-tail demonstration.</p>	<ul style="list-style-type: none"> ➤ The specially designed feed dogs ensure that the fabric is picked up and supported from the front of the presser foot to the rear. This makes for much more accurate feeding.
<p>SERGING/OVERCAST STITCHES</p>	<p>FABRIC: Stretch Medium sweatshirt fleece and ribbing</p> <p>SELECT: Overedge (shell) stitch; Stitch Width: wide; and Stitch Length: 1-2.</p> <p>USE: General Purpose Presser Foot</p> <p>SEW:</p> <ul style="list-style-type: none"> ➤ Cut a small neckline in a piece of sweatshirt fleece (fold in half and cut a small curve). ➤ Fold ribbing in half lengthwise, and stretch to fit curve of fabric. ➤ Sew near fabric edge creating a neckline. <p>SHOW: The Inspiration 4210 and 4212 offer more stretch stitches.</p>	<ul style="list-style-type: none"> ➤ Sew the seam and overcast the edges at the same time. ➤ The Overedge stitch prevents raveling of the seam allowance on a woven fabric and creates a seam that will stretch on knit fabrics.

<i>Feature</i>	<i>Technique</i>	<i>Benefit</i>
<p>EASY BLIND HEM</p> 	<p>FABRIC: Woven Medium wool</p> <p>SELECT: Blind Hem stitch; Stitch Length: 1.5 – 2.5; and Stitch Width: wide.</p> <p>USE: Blind Hem Foot</p> <p>SEW:</p> <ul style="list-style-type: none"> ➤ Fold up a hem in fabric. ➤ Sew the hem with the fold riding along the guide of the foot, just catching the fold with the left swing of the needle as you stitch. ➤ Adjust the width on the stitch width dial as needed to catch just a thread from the fold. 	<ul style="list-style-type: none"> ➤ You can "fine tune" the blind hem by adjusting the stitch width of the blind hem for different types of fabric.
<p>MULTIPLE NEEDLE POSITIONS</p> 	<p>FABRIC: Woven Medium chino</p> <p>SELECT: Center straight stitch</p> <p>USE: Multi-Purpose Presser Foot</p> <p>SEW:</p> <ul style="list-style-type: none"> ➤ Fold fabric in half ➤ Keeping fold along the outside right edge of the presser foot, sew a seam. <p>SELECT: Right needle straight stitch</p> <p>SEW: Continue sewing along the fold with the new needle position.</p> <p>SELECT: Left needle straight stitch</p> <p>SEW: Continue sewing along the fold with the new needle position.</p>	<ul style="list-style-type: none"> ➤ Inserting cording, piping, or zippers is easy with three needle positions. ➤ Needle position can be changed for individual projects such as topstitching.
<p>JAM-PROOF BOBBIN</p>	<p>FABRIC: Woven Medium calico</p> <p>SELECT: Straight stitch center needle position; Stitch Length: 2.5</p> <p>USE: General Purpose Presser Foot</p> <p>SEW: Piece quilt strips together with one continuous seam, stitching "on air" between the fabric strips.</p>	<ul style="list-style-type: none"> ➤ With the no-jam floating hook system, you can even sew off the fabric. ➤ The Inspiration 4205 allows easy strip piecing because of this feature. ➤ A wonderful feature for the quilter, home dec sewer, garment sewer – everyone!

<i>Feature</i>	<i>Technique</i>	<i>Benefit</i>
<p>EASY-TOUCH STITCH SELECTION</p> 	<p>SHOW: Select various stitches from the stitch selection dial to show how easy it is to select a change of stitch.</p>	<ul style="list-style-type: none"> ➤ Just dial a stitch and you are ready to sew. ➤ Each stitch is pictured on the stitch selection dial.
<p>BUILT-IN DECORATIVE STITCHES</p> 	<p><i>SHOW: Decorative Stitch Sample</i></p> <p>FABRIC: Woven Medium chino and stabilizer (under the fabric).</p> <p>SELECT: Zigzag stitch; Stitch Length: almost 0.</p> <p>USE: Special Purpose Foot “J”</p> <p>SEW: Sew, adjusting the stitch width dial as you stitch.</p> <p>SHOW: The Singer Inspiration 4206, 4212, and Singer Confidence family all offer more decorative stitches.</p>	<ul style="list-style-type: none"> ➤ Decorative stitches are a great way to add interest to a project or even embellish a ready-to-wear garment.
<p>ALPHABETS/ MONOGRAMS</p>	<p><i>SHOW: Lettering Sample</i></p> <p>SHOW: Singer Confidence 7470 and Singer Curvy 8770 both have this feature.</p>	
<p>MACHINE SETTING ADVICE</p>	<p>SHOW: The Singer Confidence family has this feature.</p>	
<p>QUILTING FEATURES</p>	<p><i>SHOW: Quilting Sample</i></p> <p>SHOW: The Singer Inspiration 4212 has this feature.</p>	<ul style="list-style-type: none"> ➤ Is this feature important to you? ➤ Singer Inspiration 4212 includes both the Walking Foot and the Quilt Foot. The Walking Foot helps quilt layers feed evenly when quilting, and the Quilt Foot sews a perfect quarter inch seam.