



Singer Inspiration™ 4206



General Purpose, Special Purpose, Buttonhole, Zipper, Adjustable Blind Hem Foot
 *Singer Bonus Bag:
 Driver Tool, Free Motion/Darning, Gathering, Rolled Hem, Quilt Foot



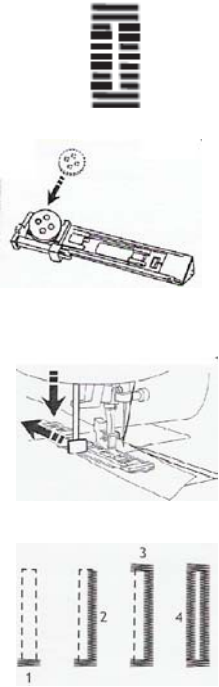 
6 Stitches

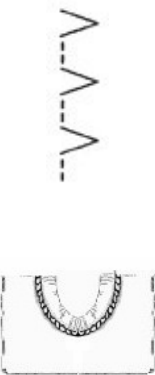 

The Singer Inspiration 4206 has all the family features of the Inspiration 4205 plus the following



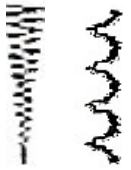
Sell-Up Features from the Inspiration 4205:

- 1 MORE STITCH – A decorative stitch to embellish crafts, home décor, and garments.
- 2 MORE FEET – The Quilt foot has a single hole to provide a beautiful seam on lightweight fabrics, while the Rolled Hem foot makes sewing a narrow rolled hem fun and easy.
- AUTOMATIC ONE-STEP BUILT-IN BUTTONHOLE – Buttonhole sewing is a one-step simple process that provides reliable results.
- AUTOMATIC NEEDLE THREADER – Makes threading the needle a snap.
- SNAP-ON PRESSER FEET – Change from one foot to another effortlessly with Snap-On accessory feet.

<i>Feature</i>	<i>Technique</i>	<i>Benefit</i>
SEWS ALL FABRIC TYPES & WEIGHTS -----	<i>(KITE-TAIL)</i> FABRIC: Woven Medium chino, Stretch Light tricot, and Woven Heavy denim SELECT: Center needle straight stitch USE: General Purpose Presser Foot SEW: Fold all fabrics in half, right sides together. Lining up fold with 5/8" seam guide on stitch plate, sew each fabric, one right after the other.	<ul style="list-style-type: none"> ➤ The Singer Inspiration 4206 will sew all different types of fabrics without having to change the tensions. ➤ The electronic foot control and penetration power of the Singer Inspiration 4206 will handle any of your heavy-duty projects: <ul style="list-style-type: none"> ▪ Home dec ▪ Craft sewing with specialty fabrics ➤ The Automatic Pressure System automatically adjusts pressure for sewing on the lightest weight tricot to the heaviest denim to maximize feed accuracy.
EASY THREADING & BOBBIN WINDING	SHOW: ➤ Threading the top thread with the Exclusive NoError Threading™	<ul style="list-style-type: none"> ➤ The Singer Inspirations 4206 has Exclusive NoError Threading. This fault-tolerant upper threading system works

<i>Feature</i>	<i>Technique</i>	<i>Benefit</i>
	<ul style="list-style-type: none"> ➤ The additional spool pin for twin needle sewing <p>SHOW:</p> <ul style="list-style-type: none"> ➤ Where the bobbin is wound ➤ Bobbin stop ➤ The Exclusive SureFit Bobbin™ 	<ul style="list-style-type: none"> ➤ even if you forget to raise the presser foot. Thread the machine in seconds by just following the arrows. ➤ Notice the handy thread cutter on the back. ➤ The bobbin winder automatically disengages the needle for bobbin winding, and the automatic bobbin stop prevents over-winding. ➤ With the Singer Exclusive SureFit Bobbin, it is easy to correctly insert the bobbin because it only goes in one way.
<p>WORRY-FREE TENSION</p> 	<p>SHOW: Tension lever</p> <p>SHOW: The normal range is indicated on the tension dial with the "AUTO" setting.</p>	<ul style="list-style-type: none"> ➤ Tension adjustment is not needed on the Singer Inspiration for many types of fabric.
<p>PERFECT REPEATING BUTTONHOLES</p> 	<p>SHOW: <i>Buttonhole Sample</i></p> <p>FABRIC: Woven Medium chino and stabilizer</p> <p>SELECT: Buttonhole stitch; Stitch Length on Buttonhole; and Stitch Width at the widest setting.</p> <p>USE: Buttonhole Foot</p> <p>SEW:</p> <ul style="list-style-type: none"> ➤ Fold fabric in half with a piece of stabilizer between the layers. ➤ Slide the buttonhole foot to the back. ➤ Place the button in the adjustable measuring guide on the back of the foot. ➤ Push the button holder back against the button to hold it tight. ➤ Position the fabric under the presser foot. ➤ Lower the buttonhole lever, and push it away from you. ➤ Hold the end of the upper thread and start sewing. ➤ The front bartack will sew first, then the right side, the back bartack, and 	<ul style="list-style-type: none"> ➤ The buttonhole is repeated easily by using the marked lines on the foot as a guide. This is helpful when you are sewing many buttonholes of the same length. ➤ Buttonhole sewing is a one-step simple process that provides reliable results.

<i>Feature</i>	<i>Technique</i>	<i>Benefit</i>
	finally the left side of the buttonhole.	
PERFECT FABRIC FEEDING	<ul style="list-style-type: none"> ➤ The special feeding system is shown in the kite-tail demonstration. 	<ul style="list-style-type: none"> ➤ The specially designed feed dogs ensure that the fabric is picked up and supported from the front of the presser foot to the rear. This makes for much more accurate feeding.
SERGING/ OVERCAST STITCHES 	<p>FABRIC: Stretch Medium sweatshirt fleece and ribbing</p> <p>SELECT: Overedge (shell) stitch; Stitch Width: wide; Stitch Length: 1-2.</p> <p>USE: General Purpose Presser Foot</p> <p>SEW:</p> <ul style="list-style-type: none"> ➤ Cut a small neckline in a piece of sweatshirt fleece (fold in half and cut a small curve). ➤ Fold ribbing in half lengthwise, and stretch to fit curve of fabric. ➤ Sew near fabric edge creating a neckline. <p>SHOW: The Singer Inspiration 4210 and 4212 both have more stretch stitches.</p>	<ul style="list-style-type: none"> ➤ Sew the seam and overcast the edges at the same time. ➤ The Overedge stitch prevents raveling of the seam allowance on a woven fabric and creates a seam that will stretch on knit fabrics.
EASY BLIND HEM 	<p>FABRIC: Woven Medium wool</p> <p>SELECT: Blind Hem stitch; Stitch Length: 1.5 – 2.5, and Stitch Width: wide.</p> <p>USE: Blind Hem Foot</p> <p>SEW:</p> <ul style="list-style-type: none"> ➤ Fold up a hem in fabric. ➤ Sew the hem with the fold riding along the guide of the foot, just catching the fold with the left swing of the needle as you stitch. ➤ Adjust the width on the stitch width dial as needed to catch just a thread from the fold. 	<ul style="list-style-type: none"> ➤ You can "fine tune" the blind hem by adjusting the stitch width of the blind hem for different types of fabric.
MULTIPLE NEEDLE POSITIONS	<p>FABRIC: Woven Medium chino</p> <p>SELECT: Center straight stitch</p>	<ul style="list-style-type: none"> ➤ Inserting cording, piping, or zippers is easy with three needle positions. ➤ The needle position can be changed for

<i>Feature</i>	<i>Technique</i>	<i>Benefit</i>
	<p>USE: Multi-Purpose Presser Foot</p> <p>SEW:</p> <ul style="list-style-type: none"> ➤ Fold fabric in half. ➤ Keeping fold along the outside right edge of the presser foot, sew a seam. <p>SELECT: Right needle straight stitch</p> <p>SEW: Continue sewing along the fold with the new needle position.</p> <p>SELECT: Left needle straight stitch</p> <p>SEW: Continue sewing along the fold with the new needle position.</p>	<p>individual projects such as topstitching.</p>
<p>JAM-PROOF BOBBIN</p>	<p>FABRIC: Woven Medium calico</p> <p>SELECT: Straight stitch center needle position; Stitch Length: 2.5</p> <p>USE: General Purpose Presser Foot</p> <p>SEW: Piece quilt strips together with one continuous seam, stitching “on air” between the fabric strips.</p>	<ul style="list-style-type: none"> ➤ With the no-jam floating hook system, you can even sew off the fabric. ➤ The Inspiration 4206 allows easy strip piecing because of this feature. ➤ A wonderful feature for the quilter, home dec sewer, garment sewer – everyone!
<p>EASY-TOUCH STITCH SELECTION</p> 	<p>SHOW: Select various stitches from the Stitch Selection dial to show how easy it is to select or change a stitch.</p>	<ul style="list-style-type: none"> ➤ Just dial a stitch and you are ready to sew. ➤ Each stitch is pictured on the stitch selection dial.
<p>BUILT-IN DECORATIVE STITCHES</p> 	<p><i>SHOW: Decorative Stitch Sample</i></p> <p>FABRIC: Woven Medium chino and stabilizer (under the fabric)</p> <p>SELECT: Crescent stitch; Stitch Width: wide; and Stitch Length: 0.5-1.0.</p> <p>USE: Special Purpose Foot “J”</p> <p>SEW: Sew, adjusting the stitch width dial as you stitch.</p> <p>SHOW: The Singer Inspiration 4212 and</p>	<ul style="list-style-type: none"> ➤ Decorative stitches are a great way to add interest to a project or even embellish a ready-to-wear garment.



<i>Feature</i>	<i>Technique</i>	<i>Benefit</i>
	the Singer Confidence family all offer more decorative stitches.	
ALPHABETS/ MONOGRAMS	<i>SHOW: Lettering Sample</i> SHOW: Singer Confidence 7470 and Singer Curvy 8770 both have this feature.	
MACHINE SETTING ADVICE	SHOW: The Singer Confidence family has this feature.	
QUILTING FEATURES	<i>SHOW: Quilting Sample</i> SHOW: Quilt Foot SHOW: Singer Inspiration 4212 includes the Walking Foot.	<ul style="list-style-type: none"> ➤ Is this feature important to you? ➤ Singer Inspiration 4206 includes the Quilt Foot. This foot allows you to sew a perfect quarter inch seam. ➤ Singer Inspiration 4212 includes both the Quilt Foot and the Walking Foot. The Walking Foot helps quilt layers feed evenly when quilting.